




PREMIUM SCREEN REMOVAL AND INSTALLATION


Premium Screen Removal and Installation

- To remove the screen, push down on each bottom corner where indicated. The screen should move down and allow the top to clear the window frame and tilt toward you.

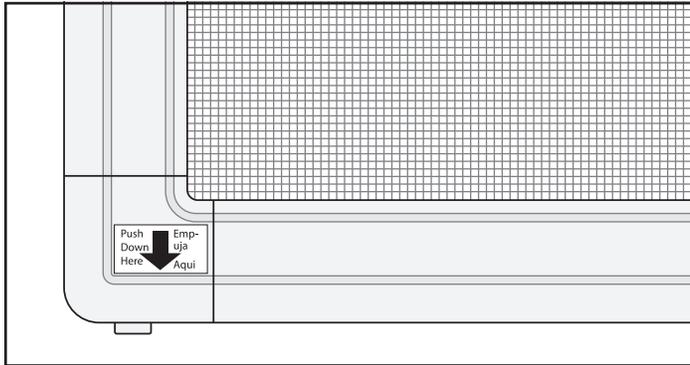


- These screens will have two sets of pins, located top and bottom (not visible when the screen is installed). The pins will be fixed on the top end and operable on the bottom.


Fixed Pin

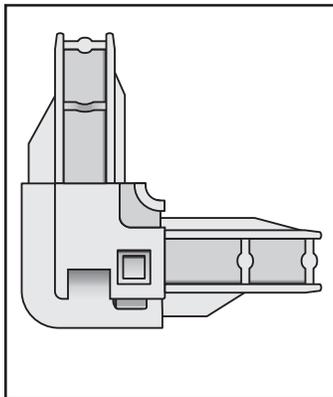

Operating Pin

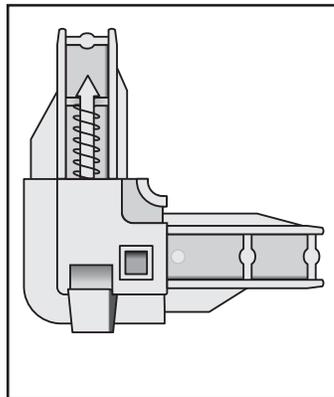

- To install the screen, place the screen frame with the operable pins against the bottom of the window so that the pins will catch in the window frame groove. Swing the top toward the window while slightly pushing down until the screen is flush on the window. Slightly push upward so the fixed pins catch in the top window frame groove along the top of the window.

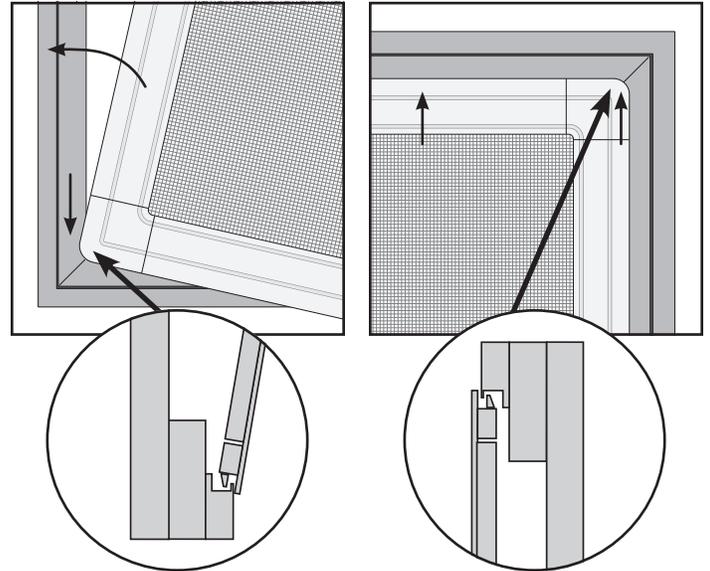

The advice offered herein can be accomplished by a property owner with some mechanical aptitude. If you are unsure, it is recommended that you hire a trained service provider such as a competent and licensed construction contractor or building professional. JELD-WEN disclaims any and all liability associated with the use and/or provision of these instructions. Any reliance upon the information or advice is at the risk of the party so relying. The information contained herein may be changed from time to time without notification.